

Dosyalar > IYTE- PADS Pro > Program exeleri

Ad	Değiştirme	Değiştiren	Dosya Boyutu	Paylaşıyor
PADSProVX.2.6_2043402_win32.exe	17 Ekim	Ozge Gezek	114 MB	Paylaşılan
PADSProVX.2.6_2043402_win64.exe	17 Ekim	Ozge Gezek	114 MB	Paylaşılan
PADSProVX.2.6_DOCS_2043376_win32.exe	17 Ekim	Ozge Gezek	114 MB	Paylaşılan
read me.rtf	Yaklaşık bir saat önce	Ozge Gezek	7,98 MB	Paylaşılan

Kurulu olan windows sürümünüze göre ..._win64 veya ..._win32 . exe dosyalarından birisini indirin ve indirdiğiniz dosyayı çalıştırın.

Mentor Install

Mentor®
A Siemens Business

English (United States)

Install

- Install Products
- Download Only
- Install Licensing Software
- Install Hardware Key Drivers

Manage Software

Manage Licensing

Tools

Help

Install, Remove, and Configure Licensing. Also install dongle drivers.

5.9-022 Windows 10

Copyright Mentor Graphics Corporation 2001-2019, All Rights Reserved

Exit



▶ **Install**

▶ **Manage Software**

▼ **Manage Licensing**

Install or Update Mentor products from a DVD or a source previously created by using the Download Only option.

Install Licensing Software

Configure Licensing

Install Hardware Key Drivers

License Utilities

▶ **Tools**

▶ **Help**



Configure Steps

▶ **License Type**

Import license file

Reads a license file and determines what configuration is needed.

Note:

If you have a hardware key, make sure you install the drivers first before plugging in the hardware key. Driver files found by an automatic search may not be compatible.

Point to a license server

Licenses are made available via a floating license server.

Local Server Administration

View server logs and checkout status, or stop/start servers on this machine.

Configure Steps

► License Type


► Add a Server

Port number and host name:

1717@10.2.56.11

Test

To be able to consume licenses from the license server, enter the port number and host name of the server.

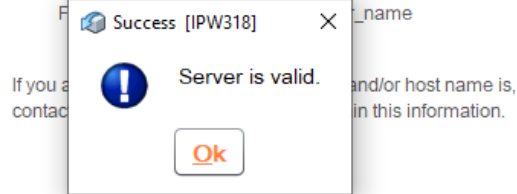

Current license and server configuration:

NONE

Edit

1717@10.2.56.11 adresini test kısmına girin ve **test** butonuna basın. Yukarıdaki gibi bir pencere çıkıyorsa lisansa ulaşabiliyorsunuz demektir. **Bu işlem sadece bölüm sınırları içerisindeyken yapılabilir.**

Test butonunun aşağısındaki **Edit** butonuna basın.

Variable:

Value: NONE

License Environment Variable Entries:

Variable	Value
----------	-------

Add

Remove

Cancel

Save

Add butonuna bastıktan sonra 1717@10.2.56.11 adresini tekrar giriniz ardında save e basarak devam edin.

Configure Steps

▶ License Type

▶ Add a Server

Port number and host name:

Test

To be able to consume licenses from the license server, enter the port number and host name of the server.

For example: 1717@license_server_name

If you are not sure what the port number and/or host name is, contact your system administrator to obtain this information.

Current license and server configuration:

Edit

5.9-022 Windows 10

Back

Next



English (United States) ▼

▶ Install

▶ Manage Software

▼ Manage Licensing

Install Licensing Software

Configure Licensing

Install Hardware Key Drivers

License Utilities

Remove Licensing Software

▶ Tools

▶ Help

Install or Update Mentor products from a DVD or a source previously created by using the Download Only option.

5.9-022 Windows 10

Exit



▼ **Install**

Install Products

Download Only

Install Licensing Software

Install Hardware Key Drivers

Install or Update Mentor products from a DVD or a source previously created by using the Download Only option.

▶ **Manage Software**

▶ **Manage Licensing**

▶ **Tools**

▶ **Help**



Install Steps

▶ **Options**

▶ Source Target

▶ Selection

▶ EULA

▶ Confirm

▶ Installing

Install from the cloud

Allows installation directly from the cloud.

Install from a saved download

Allows installation from a previously saved download.



Install Steps

► Options

► **Target**

► Selection

► EULA

► Confirm

► Installing

Available products:

Release Name: PADS Pro Tools VX.2.6

Date: Aug 07, 2019

Description:

PADS Professional Flow

Products:

3D Plug-in

Allegro to PADS Professional

HyperLynx DRC PE

Layout Browser

PADS Professional

PADS Professional Advanced 3D

PADS Professional FPGA-PCB

PADS Professional RF Design

Select a target location:

D:\Programs

Browse

Sizin için uygun olan bir konumu seçin ve Next e basın.

Install Steps

- ▶ Options
- ▶ Target
- ▶ **Install Type**
- ▶ Selection
- ▶ EULA
- ▶ Confirm
- ▶ Installing

Typical (Install software)

For use with documentation installed to the same path.








Install software and use shared documentation

The software will install and use a shared documentation location specified on the next screen.

Install Steps

- ▶ Options
- ▶ Target
- ▶ Install Type
- ▶ **Selection**
- ▶ EULA
- ▶ Confirm
- ▶ Installing

Select Products:

- ▼ PADS Pro Tools VX.2.6 
 - ▶ Additional PADS Professional Flow Products
 - ▶ Translators and Utilities
 - 3D Plug-in
 - HyperLynx DRC PE 
 - Layout Browser 
 - PADS Professional 
 - PADS Professional Advanced 3D 
 - PADS Professional FPGA-PCB 
 - PADS Professional RF Design 



Space required: 9926,1 MB
Space available: 266716,0 MB

Install Steps

- ▶ Options
- ▶ Target
- ▶ Install Type
- ▶ Selection
- ▶ **EULA**
- ▶ Confirm
- ▶ Installing

Software (as defined in Section 2) and hardware (collectively "Products") between the company acquiring the Products ("Customer"), and the Mentor Graphics entity that issued the corresponding quotation or, if no quotation was issued, the applicable local Mentor Graphics entity ("Mentor Graphics"). Except for license agreements related to the subject matter of this license agreement which are physically signed by Customer and an authorized representative of Mentor Graphics, this Agreement and the applicable quotation contain the parties' entire understanding relating to the subject matter and supersede all prior or contemporaneous agreements. If Customer does not agree to these terms and conditions, promptly return or, in the case of Software received electronically, certify destruction of Software and all accompanying items within five days after receipt of Software and receive a full refund of any license fee paid.

1. ORDERS, FEES AND PAYMENT.

Save

Print

Having read the entire license, do you agree as an authorized representative to the terms of this legally enforceable agreement? If you select "Disagree," the software will not install. Selecting "Agree" means you agree to be bound by the terms of this license.

5.9-022 Windows 10

Disagree

Agree

Install Steps

- ▶ Options
- ▶ Target
- ▶ Install Type
- ▶ Selection
- ▶ EULA
- ▶ **Confirm**
- ▶ Installing

Installing the following products to:

Target: D:\Programs

Space Required: 9926,1 MB

Space Available: 266716,0 MB

Release: PADS Pro Tools VX.2.6

Products:

- 3D Plug-in
- PADS Professional
- PADS Professional FPGA-PCB
- Spice Integration
- iCDB Server Monitor


5.9-022 Windows 10

Back

Install

Bu aşamadan sonra programınız kurulacaktır.

Kurulum işlemi bittikten sonra Başlat menüsü > Edit sytem enviromental variables alanına gelerek

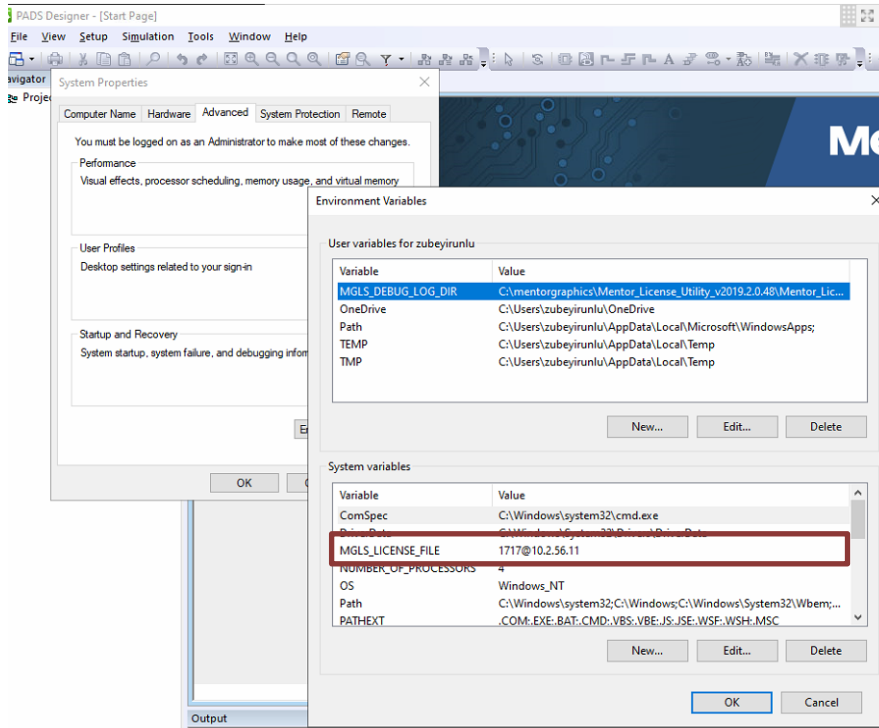

MGLS_LICENSE_FILE 1717@10.2.56.11

Satırını eklemeleri gereklidir.

Bu düzenleme lisans erişimi için açılan 1717 portundan aynı networkteki (10.2.56.11 ipv4 adresli) bulunan (lisanslar yalnızca Elektronik Mühendisliği binasında kullanılabilir.) kullanıcı bilgisayarlarının lisans çekebilmelerini sağlayan satırdır.

Bu düzenlemeler bittikten sonra PC restart edilmelidir.

Ardından pds Professional Designer ve Layout programlarına erişebilirsiniz.

Kurulumla birlikte gelen programın Evaluation Guide'ına erişmek için ise kurulumu yaptığınız C veya D lokasyonuna gelin. Bu lokasyonda hazırda bir kaç proje dosyası bulunuyor. Bu dosyalar baştan sona bir schematic dosyası nasıl oluşturulur ardından layout ve simülasyon adımlarına nasıl gidilir detaylı olarak adım adım anlatmaktadır. Eş zamanlı olarak proje dosyalarını kullanarak ve tutorialdan takip ederek tüm adımlara bakmanızı tavsiye ederim.

Local Disk (C:)

File Home Share View

< > This PC > Local Disk (C:) >

Name	Date modified	Type	Size
MentorGraphics	27.09.2019 10:42	File folder	
PADS_Professional_Eval_VX.2.6	30.09.2019 09:52	File folder	
PerfLogs	19.03.2019 07:52	File folder	
Program Files	18.10.2019 22:51	File folder	
Program Files (x86)	18.10.2019 22:51	File folder	
temp	26.03.2019 10:06	File folder	
Users	18.10.2019 11:58	File folder	
WDIR	11.09.2019 15:09	File folder	
Windows	25.11.2019 11:16	File folder	
Windows10Upgrade	10.09.2019 16:57	File folder	
M3DLVX.2.6_win64	25.11.2019 10:50	WinRAR ZIP arşivi	2.600.689 ...

Quick access

- Desktop
- Downloads
- Documents
- Pictures
- License_Files
- master-DXD
- PCB
- PCB

OneDrive

This PC

İyi çalışmalar ...